


**Tire Spindle
Installation Instructions
Part # 2391**

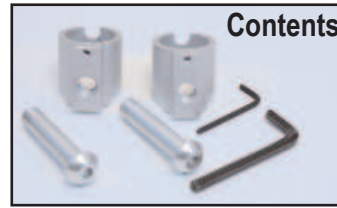

Customer Hotline:
1-866-523-2363 (toll free)
MON- FRI, 8am - 5pm CST

These new spindles are not painted, but rather anodized, which is an extremely protective, hard and corrosion-proof finish.

These instructions will work for both TRITON models GH164-CT and GH168-WG.

Step 1
Remove both tires from the old spindles by removing the cotter key and flat washer.

Step 2
Using the small hex key remove the tube screw from each spindle.

Step 3
Remove the front bumper from the reel frame.

Step 4
Remove the old spindles from the hose reel frame.

Step 5
Place the new spindle bases on the frame elbow.

Step 6
Ensure that the notch on each spindle aligns with the hole in the frame elbow.

Step 7
The spindles should look like those in this picture. Notches to the inside, threaded holes to the outside.

Step 8
Slide the bumper back onto the frame.

Step 9
Re-insert the tube screws (removed earlier), and tighten into the new spindle base. The 1/4" nut removed earlier can be discarded.

Step 10
Slide the spindle axle into the tire.

Step 11
Thread the axles into the spindle bases.

Step 12
Tighten the axles using the enclosed large hex key wrench.